


ENGINE 111.977 in MODEL 163.136
ENGINE 112.942 in MODEL 163.154
ENGINE 112.970 in MODEL 163.157
ENGINE 113.981 in MODEL 163.174

- 24 Accelerator pedal
- 24/1 Expanding wedge pin
- 24/4 Retracting spring of accelerator pedal
- 30 Control cable
- 34 Firewall pivot point
- 34/2 Bolts
- 34/3 Locking plate

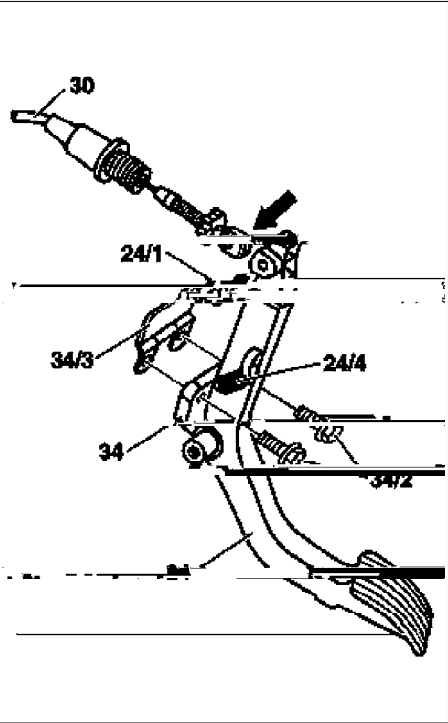


P30.12-0211-03

 	Remove, Install		
1	Detach control cable (30) at accelerator pedal (24) (arrow)	 Pull out expanding wedge bolt (24/1) in order to do this.	
2	Unscrew screws (34/2) from accelerator pedal (24)		
3	Remove accelerator pedal (24)		
4	Install in the reverse order		

MODELS 163.113 /128 /136 /154 /157 /172 /174 /175

- 1 Plugs
- 2 Bolt
- 3 Clips
- 4 Cover
- X11/4 Datalink connector

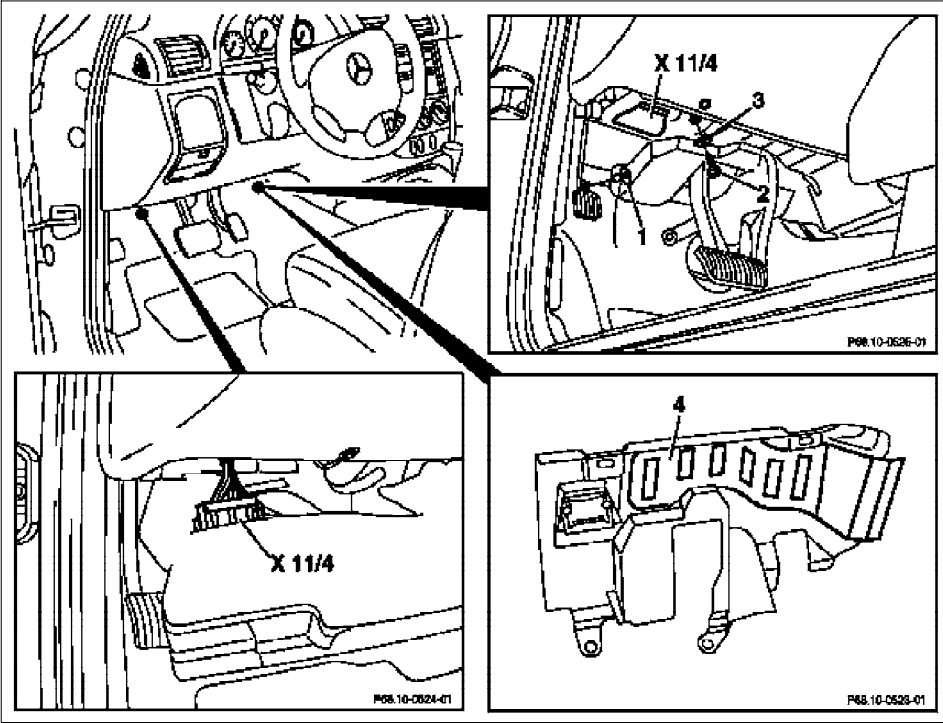

P68.10-0522-06

 	Remove/install		
1	Remove plug (1)	 2 each.	
2	Unscrew screw (2)	 2 each.  Installation: Observe clips (3).	
3	Unlock and remove data link connector (X11/4)		
4	Take off cover (4)		
5	Install in the reverse order		