


Removal and installation of windshield wiper system 82.61

460

Removal

- 1 Loosen mounting nuts of wiper arms.

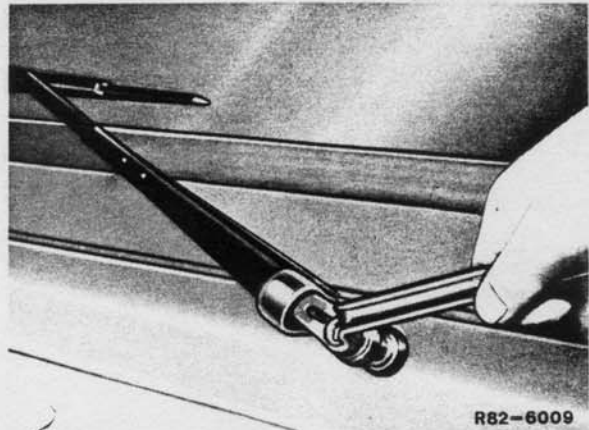


- 2 Pull off wiper arms.




- 3 Remove instrument panel (54.61 - 255).

- 4 Loosen fastening bolts of glovebox.

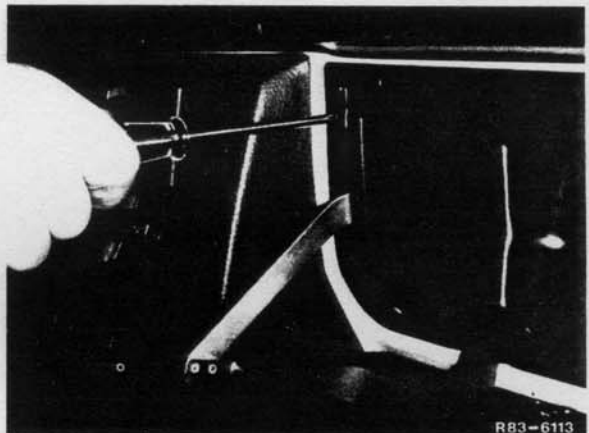


5 Loosen glovebox at bottom and remove.

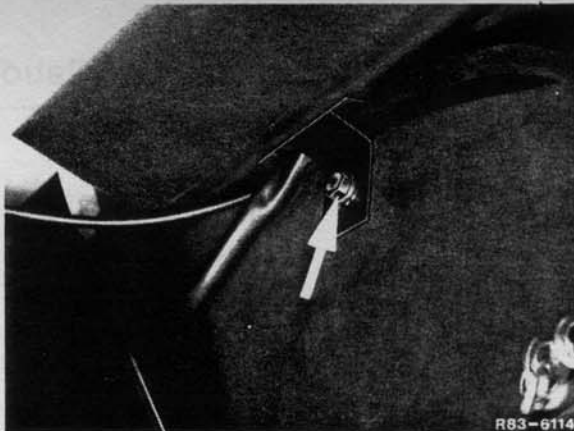


6 Unscrew fastening nuts of wiper bearings. Remove sealing ring.



7 Press wiper linkage (2) off windshield wiper motor crank (1).

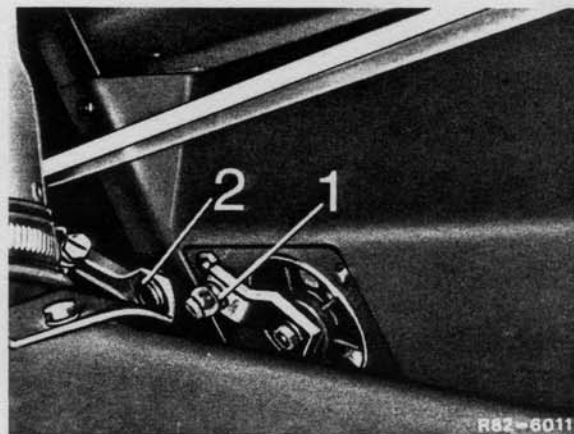


8 Remove left hand wiper bearing from bulkhead.

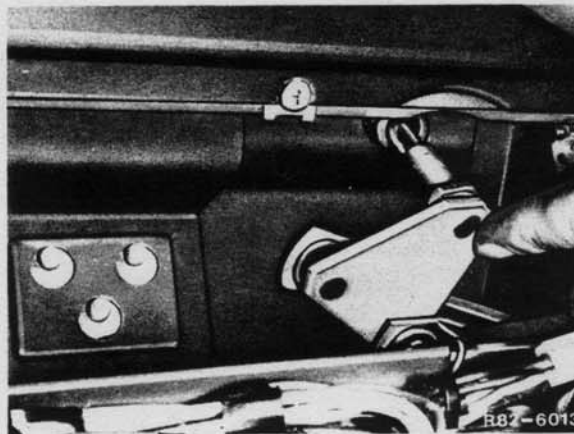

82.61 Removal and installation of windshield wiper system


2 Fit windshield wiper motor and secure.

3 Connect electric plug.

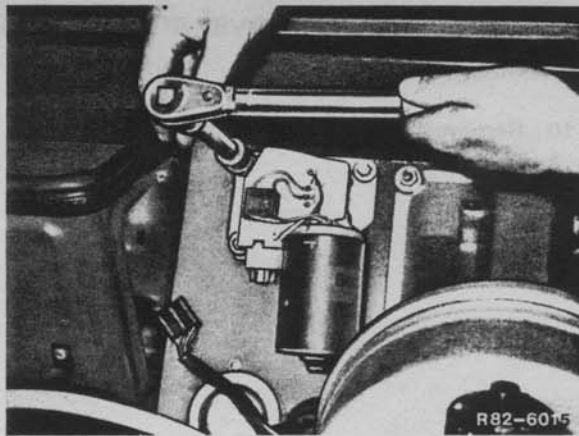


4 Fit complete wiper linkage into bulkhead.

5 Press wiper linkage (2) onto windshield wiper motor crank (1).

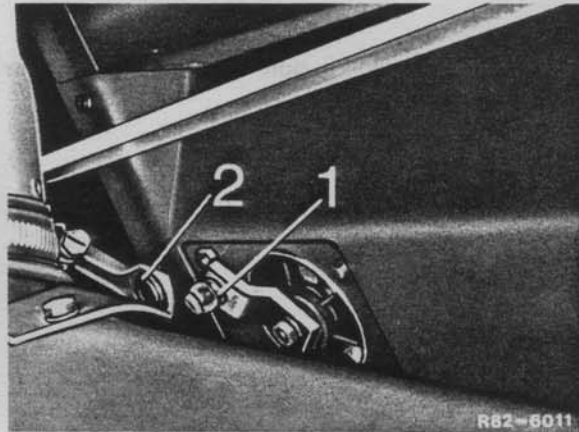


6 Screw fastening nuts with sealing rings onto wiper bearings.

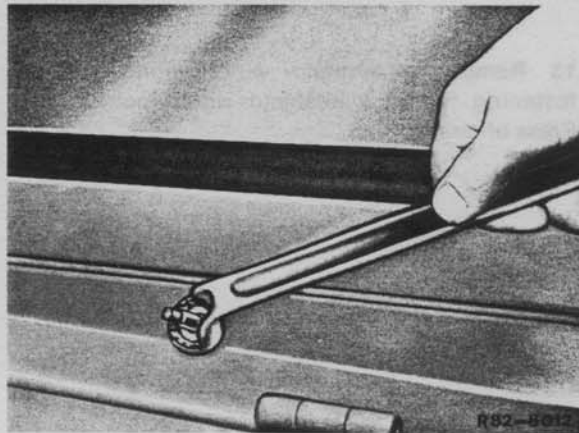


7 Fit glovebox and secure.

8 Install instrument panel (54.61-255).

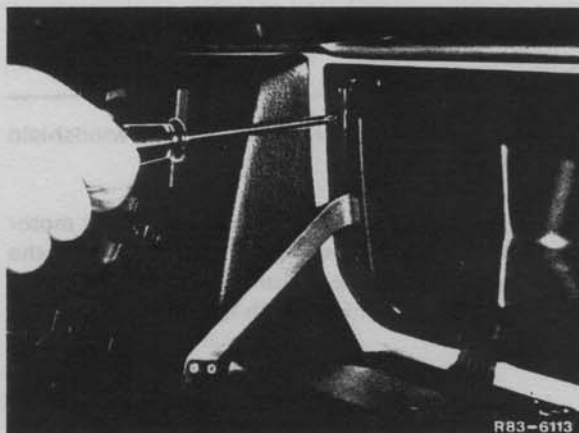

9 Remove right hand wiper bearing from bulkhead.


10 Remove complete wiper linkage.

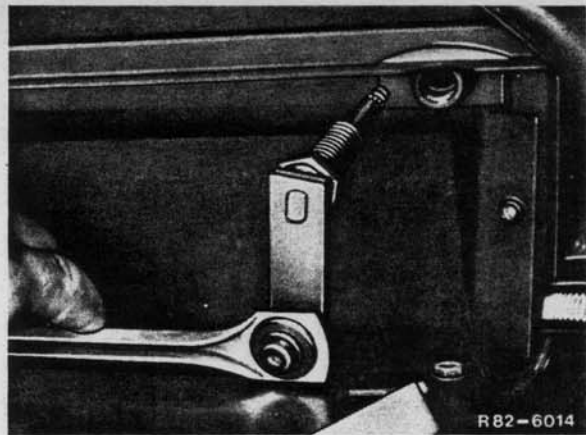

R82-6014


11 Loosen fastening bolt on windshield wiper motor.

12 Detach electric plug.

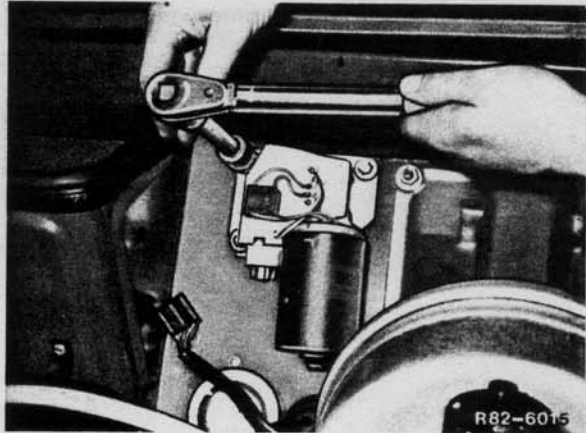

R82-6015

13 Remove windshield wiper motor. Loosen fastening nut of windshield wiper motor crank. Press off crank.

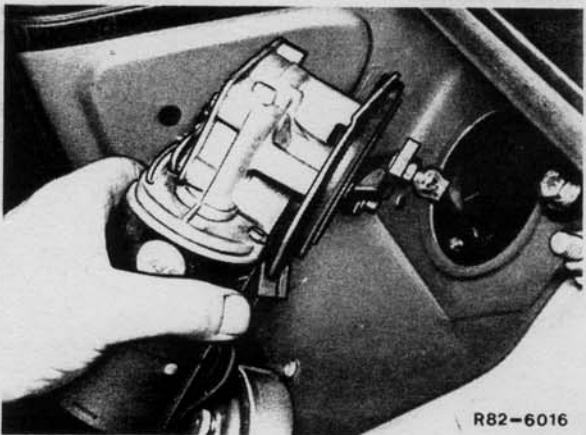


R82-6016

Installation

1 Fit windshield wiper motor crank to windshield motor axle and secure.

Note: The outer edge of the windshield wiper motor crank must form line with the outer diameter of the spacer sleeve in the mounting bracket. Grease plastic bearing of linkage with longlife grease.

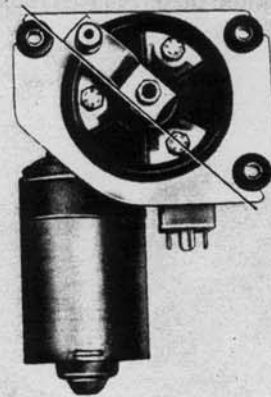

R82-6031



Removal and installation of windshield wiper system 82.61

- 9 Fit wiper arms, adjust and secure.

