

Electrical fuses

The fuses are located below the instrument panel in the front passenger footwell.

Open the fuse box cover.


Always disconnect the strap from the negative terminal of the battery before performing any work on the electrical system.

Before replacing a blown fuse, first determine the cause of the short circuit. All connections must have good contact.

Spare fuses are in the fuse box. Pay attention to colour and ampere rating!

Do not mend or bridge fuses.

Retighten the cover of the fuse box after replacing a fuse.

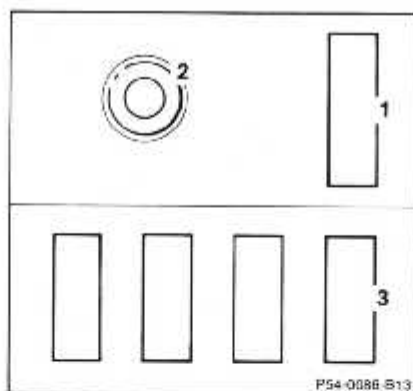

Testing fuses

Fuses can be tested in the test socket.

- Open cover of fuse box.
- Remove fuse and insert in the test socket (1).

If the indicator lamp (2) lights up, the fuse is in proper working order.

If the indicator lamp does not light up, replace fuse with spare (3).

- F1** Fuse 7.5 A
left tail lamp,
left parking lamp
- F2** Fuse 7.5 A
right tail lamp,
right parking lamp
- F3** Fuse 15 A
fog lamp,
rear fog lamp
- F4** Fuse 7.5 A
left high beam
- F5** Fuse 7.5 A
right high beam,
high beam indicator lamp
- F6** Fuse 7.5 A
left low beam
- F7** Fuse 7.5 A
right low beam
- F8** Fuse 15 A
front windscreen wipers,
front windscreen washers,
front wiper pulse generator,
reversing lamps
- F9** Fuse 20 A
blower for heater and
ventilation, interior lamp,
recirculating air switch,
glove box lamp

- F10** Fuse 7.5 A
brake lamps,
instrument cluster,
heated washer nozzle,
differential locks,
tachometer, Hall sender
- F11** Fuse 15 A
turn signals, horn,
outside mirror adjustment,
outside mirror heaters,
rear wiper pulse generator
- F12** Fuse 15 A
rear window wiper,
rear screen washer system
- F13** Fuse 10 A
hazard warning system,
clock, front interior lamp,
electrical socket, radio
- F14** Fuse 20 A
rear interior lamp,
rear window defroster
- F15** Fuse 20 A
radio, cigarette lighter,
optional extra block
- F16** Fuse 15 A
central locking system
- F17** Fuse 7.5 A
automatic transmission:
kickdown
- F18** Fuse 15 A
headlamp wash/wipe system
- F19** Fuse 7.5 A
air conditioner:
blower, compressor
- F20** Fuse 25 A
auxiliary heater:
glow plug
- F21** Fuse 15 A
auxiliary heater:
control unit, blower, timer
- F22** Fuse 25 A
left and right heated seats
- F23** Fuse 30 A
air conditioner:
auxiliary blower
- F24** Fuse 25 A
front right and rear left
electric windows
- F25** Fuse 25 A
front left and rear right
electric windows
- F26** Fuse 15 A
optional extra block
terminal 30
- F27** Fuse 15 A
optional extra block
terminal 15
- F28** Free for optional extras