MODEL 463.243 /244 /245 /246 /247 /248 /249 /250 /254 /309 /322 /323 /332 /333



P68.10-2510-09

- Cover, center of instrument panel
 Bolt
- 3 Center air nozzle

4 Clip

XX	Remove/Install		
1.1	Activate the service mode in the TELE AID emergency call system	i Model 463.244 /245 /247 /248 /250 / 254 /309 /322 /323 /332 /333 with code ET2: TELE AID car phone emergency call system.	AR82.95-P-0005-03GR
i	Notes regarding the Tele-Aid emergency call system	i Model 463.244 /245 /247 /248 /250 / 254 /309 /322 /323 /332 /333 with Code ET2: TELE AID car phone emergency call system.	AH82.95-P-0001-01GA
⚠ Danger!	Risk of explosion from hydrogen gas. Risk of poisoning and caustic burns from swallowing battery electrolyte. Risk of injury to eyes and skin suffering caustic burns from battery electrolyte or from contact with damaged lead acid batteries.	No fire, sparks, open flames or smoking. Wear acid-resistant gloves, clothing and glasses. Pour battery electrolyte only into suitable and appropriately marked containers.	AS54.10-Z-0001-01A
2	Disconnect ground cable of battery	i All models except 463.248 with code 979.	AR54.10-P-0003G AR54.10-P-0003PM
(3)	Notes on battery	Model 463.248 with code 979	AH54.10-P-0001-01A
3	Remove differential lock switch group		AR54.25-P-1080GM
4	Remove center instrument panel cover (1)	Remove center instrument panel cover (1) only until screws (2) are accessible. Do not unplug connectors.	AR68.10-P-3430GM
5	Unscrew screws (2)		
6	Remove center air nozzle (3)	i Pull center air nozzle (3) out of instrument panel at an angle upwards towards the front of the vehicle. i Danger of damaging clips (4).	
		i Installation: Ensure that center air nozzle (3) is seated correctly on air ducts.	
7	Install in the reverse order		
8.1	Deactivate service mode in TELE AID emergency call system	i Model 463.244 /245 /247 /248 /250 / 254 /309 /322 /323 /332 /333 with code ET2: TELE AID car phone emergency call system.	AR82.95-P-0005-03GR

9	Read diagnostic trouble code memory and erase	i STAR DIAGNOSIS	
		Stored faults which may be caused by disconnecting cables or by simulation during removal and installation or test operations, must be processed and erased in the fault memories after completing the work.	
₩AD	Connect STAR DIAGNOSIS and read out fault memory	memores and completing the north	AD00.00-P-2000-04A
	memory		*WE58.40-Z-1013-06A
10	Perform basic programming		AR00.19-P-0200P

Workshop equipment/MB testers (see Workshop Equipment Manual)

WE58.40-Z-1013-06A	Diagnostic system STAR DIAGNOSIS, compact passenger vehicle, order number 6511 1801 00
--------------------	--