

## Installation instructions

## Longitudinal bench seat

91.1

**Type 463** 


In the above model with wheelbase 2850 mm, the longitudinal bench seat can subsequently be installed on both sides.

The mounting points under the side wall panelling for the seat frame and backrest frame are available as standard.


The side wall penelling must be refinished in accordance with the installation instructions.

## A. Installation


1 Remove edge protection, door pillar.

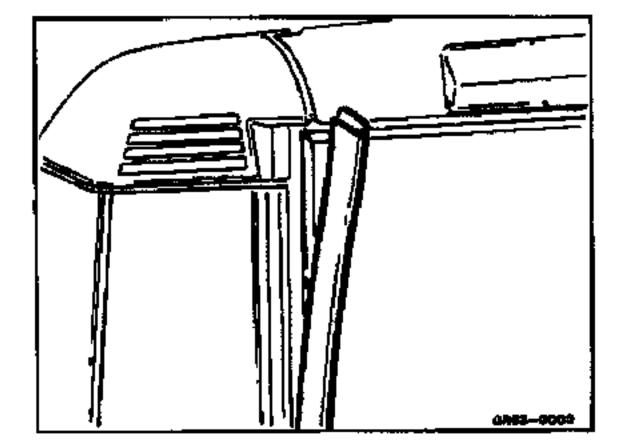


2 Remove panelling of rear pillar left and right.

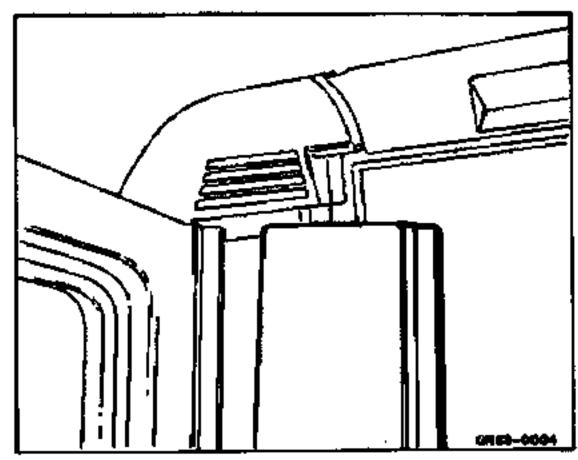


3 Remove cap and unacrew seat belt at bottom.

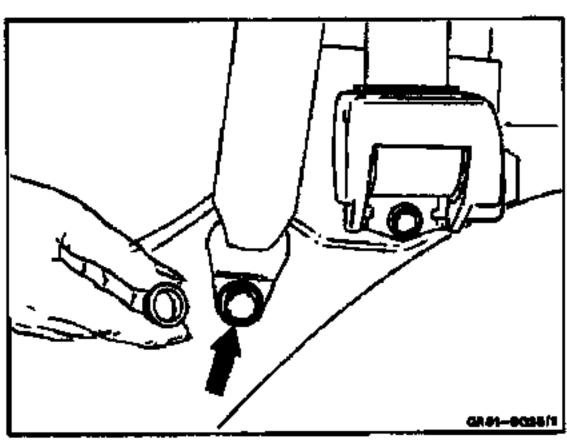


4 Remove cap from seat belt at top.

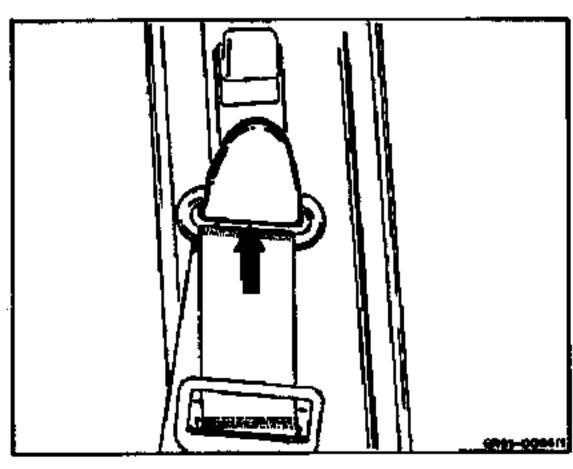


5 Unscrew seat belt.

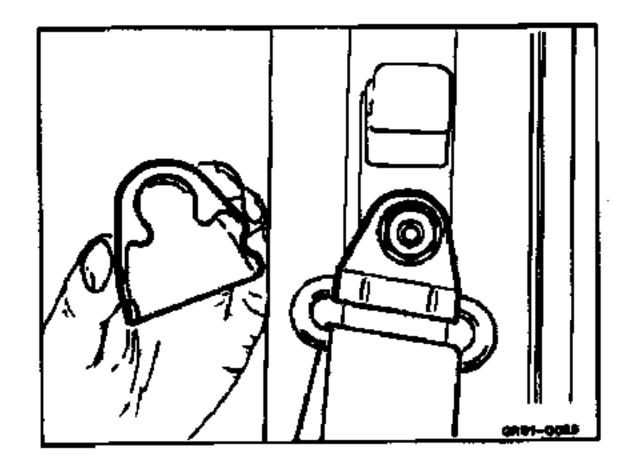


8 Remove side wall panelling from rubber window frame.

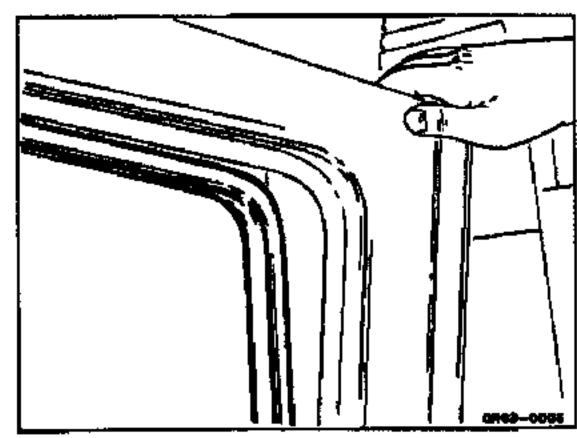


7 Remove rubber seal of rear compartment door. Remove side wall panelling.

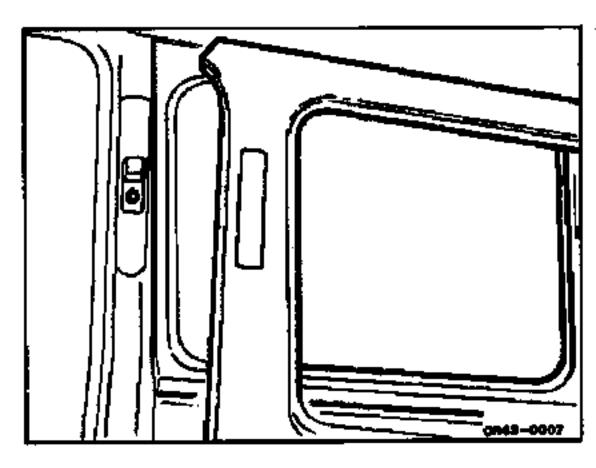


8 Unacrew roof panelling at rear.

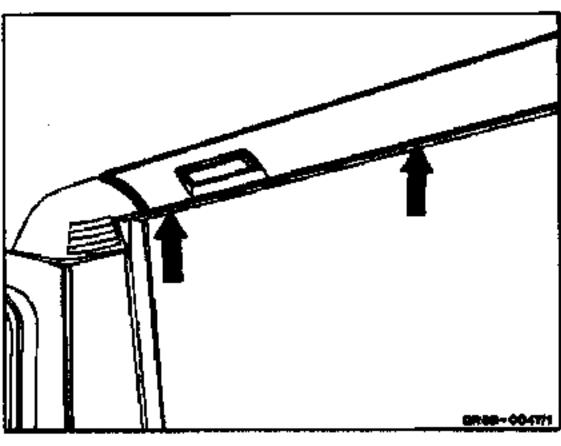


9 Unclip dome light.

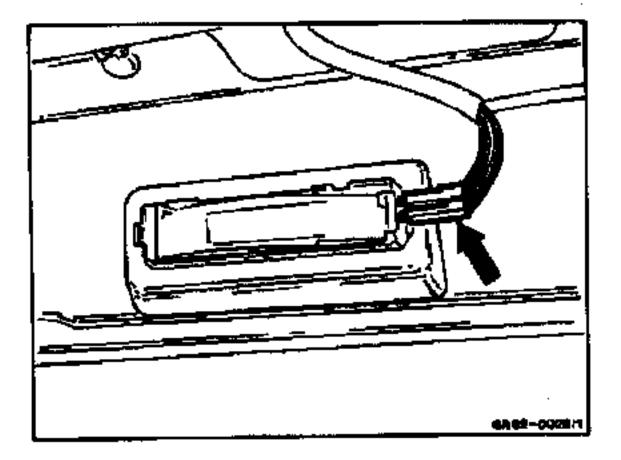

10 Remove ventilation cover.

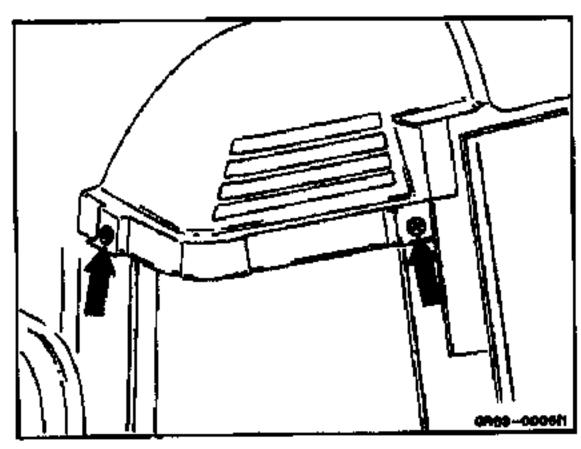


- 11 Mark tastening bores for the supporting loops on the most frame. Drill two holes dia. 3,5 mm. (Supporting loops are laterally reversed on the left and right).
- 12 Treat bores with wax preservation.

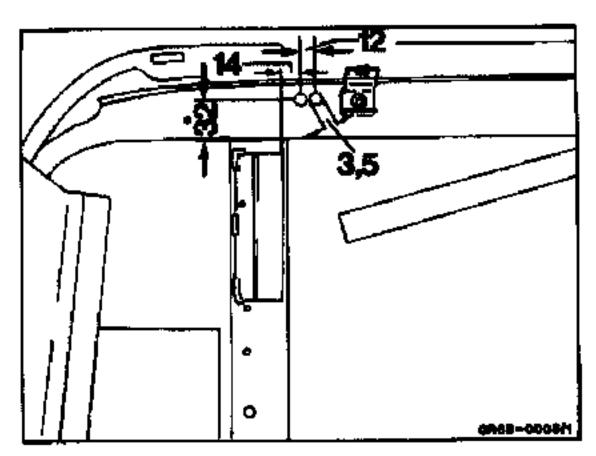


13 Secure supporting loop and holder.


\*.00

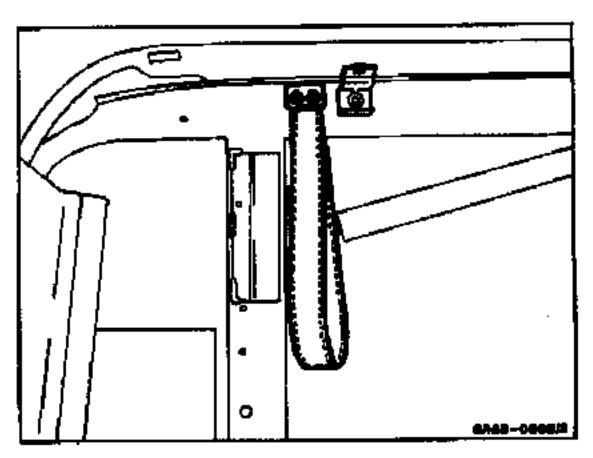


- 14 Appropriately leave open roof penelling in the area of the supporting loop.
- 15 Reduce edge protection of rear door to 932 mm (upper opver of rear door opening).
- 16 Connect dome light, reassemble panelling and edge protection.

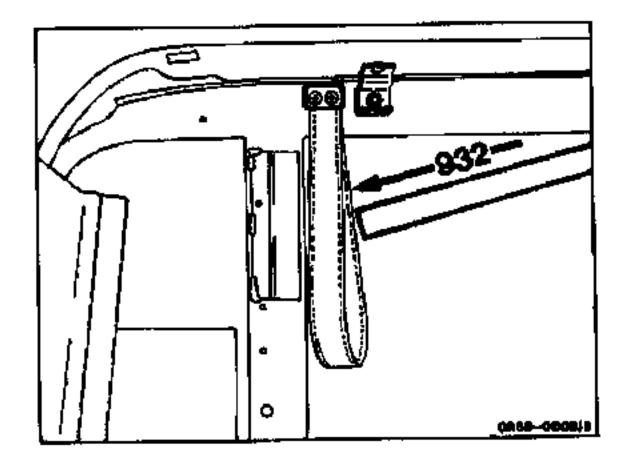


- 17 Punch 8 holes of dia. 16 mm in side wall panelling according to sketch diagram. Install side wall panelling.
- 18 Attach seat belt top and bottom.

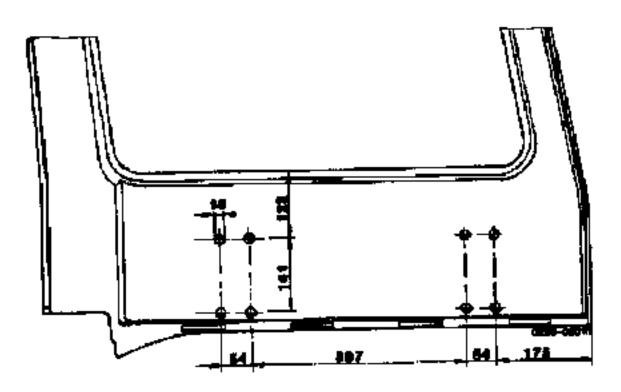

- 19 Preassemble backrest frame, seat frame and bench seat.
- 20 Screw backrest frame with seat frame to side wall panelling.
- 21 Attach backrest cushion.

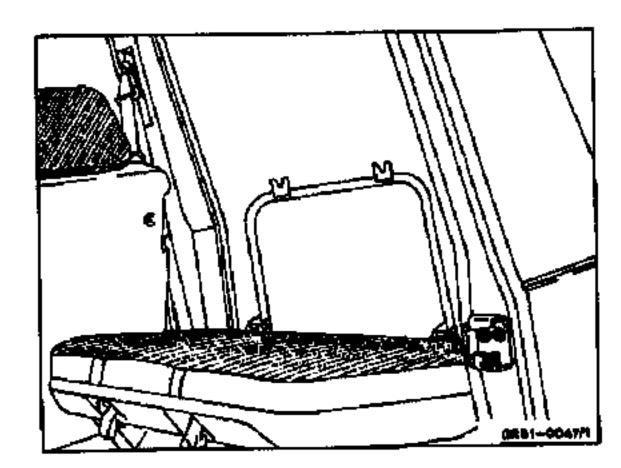

- 22 Apply step guard left and right. For this purpose degreese the adhesive surfaces on step of bumper.
- 23 Remove protective foll of step guard and stick on.

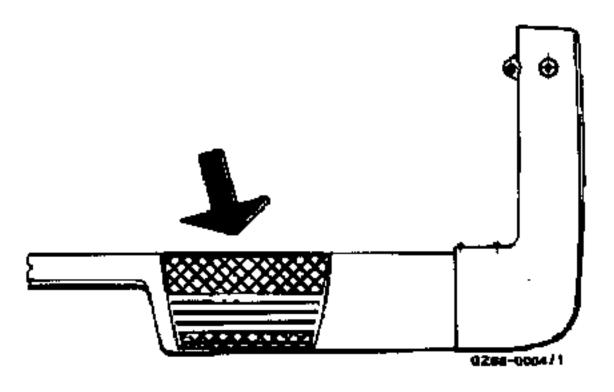

100