


Tightening torques

Designation	Thread strength		Nm
Torsion bar-stabilizer to mount, frame and connecting rod	M 12	8.8	90
Mounting bracket on trailing arm	M 10		70

Removal and installation


1 Unscrew nuts from shackles on right and left of trailing arms of front axle.

2 Remove mount and rubber mount.

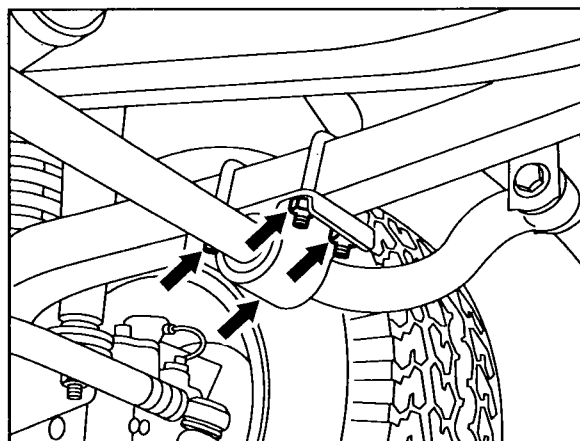

P32.35-0201-13

3 Detach right and left bolt to connecting rod. Remove torsion bar.

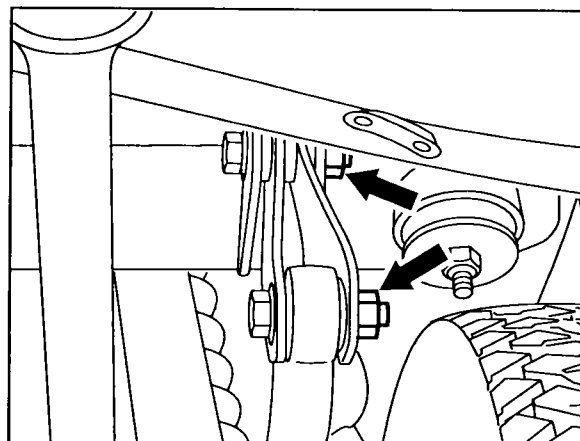


P32.35-0202-13

4 Check rubber mount, renew if required.

5 Install in reverse sequence.

Note: Replace self-locking nuts. Tighten fastening nuts (2) to 90 Nm and tighten nuts (1) for mounting bracket to 70 Nm.

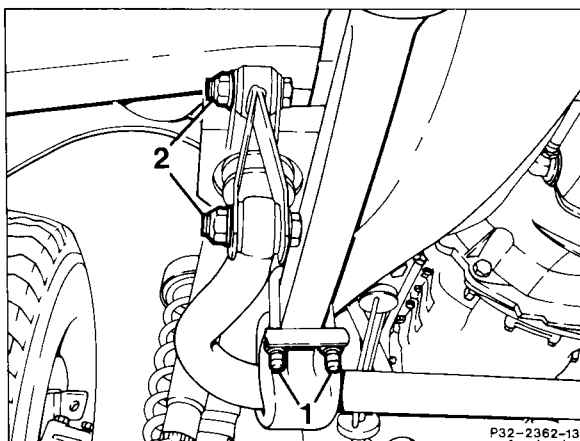

P32-2362-13