


MODELS 461.217 /219 /223 /227 /229 /238 /239 /249 /266 /267 /302 /321 /322 /323 /326 /327 /328 /329 /332 /3 35 /336 /337 /338 /341 /342 /345 /365 /366 /367 /368 /401 /402 /403 /404 /405 /450 /451 /452 /454 /455 /456 /458 /459
MODEL 463.200 /204 /206 /207 /208 /209 /220 /221 /224 /225 /227 /228 /230 /231 /232 /233 /240 /241 /300 /3 04 /307 /308 /320 /321 /324 /325 /327 /328 /330 /331

- 1 Nut
- 2 Wiper linkage
- 3 Wiper motor crank
- 4 Wiper shaft
- 5 Wiper bearing

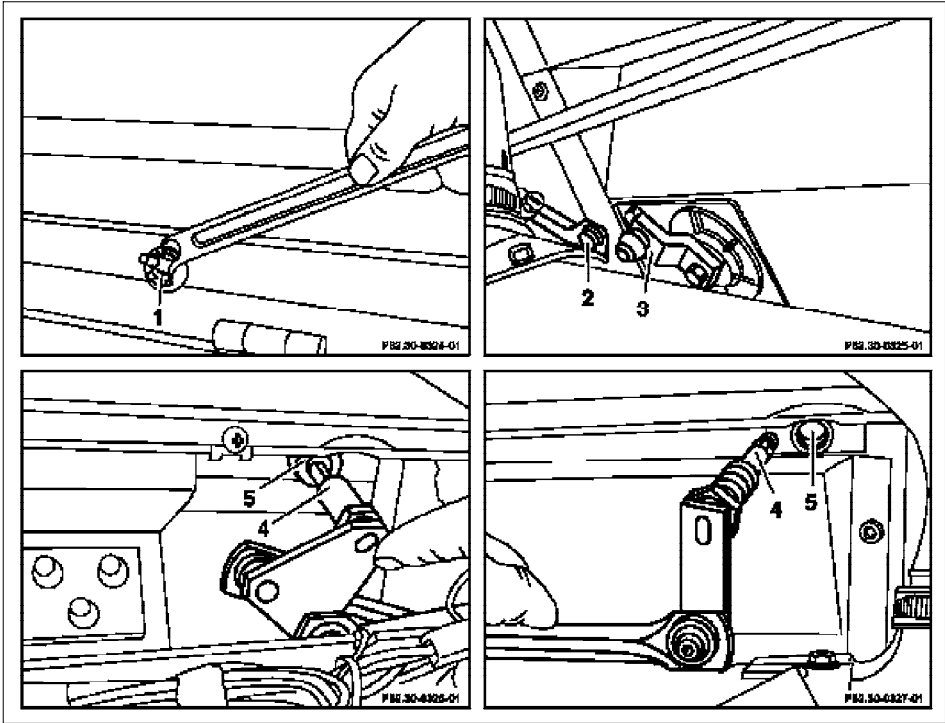

P82.30-0315-06

	Remove/Install		
Danger!	Risk of injury in the form of trapping or crushing, or even severing of limbs, if caught in windshield wiper mechanism	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Switch off wiper system, switch off ignition and remove ignition key	Doors and engine hood should be closed to move the windshield wipers to the non-actuated state. Due to the rain sensor on the windshield the wiper system can switch on automatically when the ignition is switched on.	
2	Remove top part of instrument panel	Model 461 except 461.302/332/342/345 Model 461.302/332/342/345 Model 463	AR68.10-P-1020A AR68.10-P-1020GL AR68.10-P-1020H
3	Remove wiper arm		AR82.30-P-6100A
4	Unscrew nut (1) from wiper bearing		*BA82.30-P-1004-01B
5	Pry wiper linkage (2) off of wiper motor crank (3)		
6	Remove wiper shaft (4) from wiper bearing (5)		
7	Install in the reverse order		

Windshield wiper

Number	Designation		Model 461, 463.200/204/206/207/ 208/209/220/221/224/ 225/227/228/230/231/ 232/233/240/241/243/ 244/245/247/248/249/ 250/254/300/304/307/ 308/309/320/321/322/ 323/324/325/327/328/ 330/331/332/333
BA82.30-P-1004-01B	Nut for wiper arm on firewall	Nm	23