


**MODELS** 463.243 /245 /246 /248 /249 /323 /333 except CODE (979) Special protected version

**Wheelbase** 2850 mm

**MODEL** 463.248

**Wheelbase** 2850mm

- 1 Door liner
- 2 Plug
- 3 Door handle
- 4 Inner door actuation
- 5 Screws for door handle

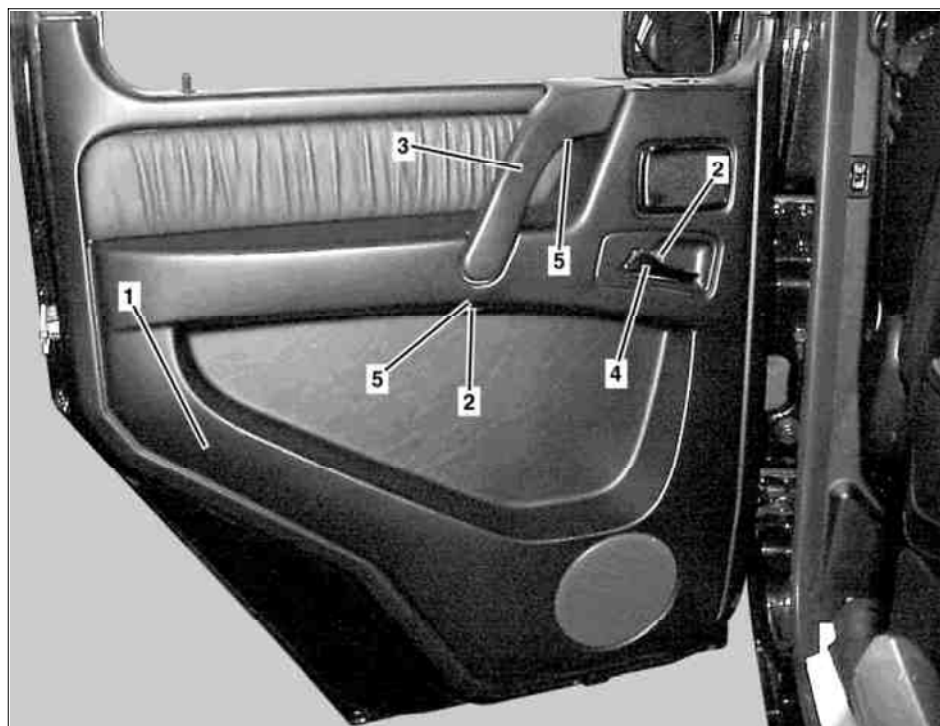


P72.12-2150-06

- 6 Clips
- S21/3 Left rear power window switch
- S21/4 Right rear power window switch




P72.12-2151-01

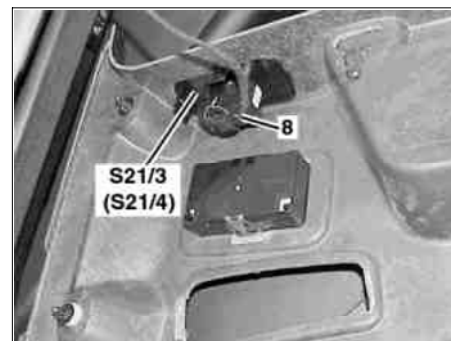




P54.25-2460-01


- A Cable strap
- N69/3 Left rear door control module
- N69/4 Right rear door control module

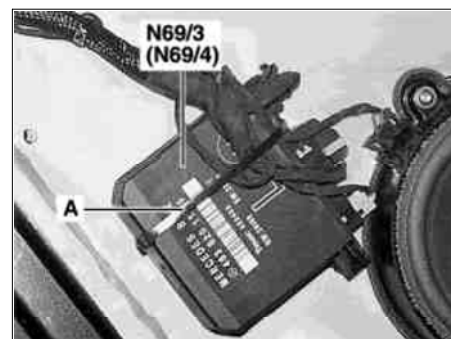

P72.29-2170-01

	Remove, Install		
1	Remove plug (2) from door handle (3) and inner door actuation (4)		
2	Unscrew screws (5) from door handle (3)		
3	Remove inner door actuation (4) from rear door		AR72.12-P-2310GN
4	Press door liner (1) off of inner door panel in area of clips (6)	Check clips (6) for damage, replace if necessary.	*110589035900

5	Disconnect coupling (8)	 On left rear power window switch (S21/3), right rear power window switch (S21/4).	
6	Remove door liner (1)	 <b>Installation:</b> Connect lines to left rear door control module (N69/3)/right rear door control module (N69/4) with one cable strap (A), if possible do not cross lines, otherwise difficulties can occur when installing the door liner (1).	
7	Check foil on inner door panel	 Replace damaged foil. When replacing foil, cut out mounting area and glue to overlap or seal with adhesive tape.	
8	Install in the reverse order		

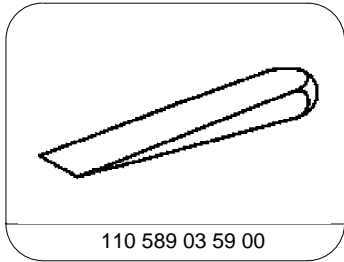

110 589 03 59 00

Assembly wedge